


PrintDry Filament Dryer **PRO3**

Instruction Manual

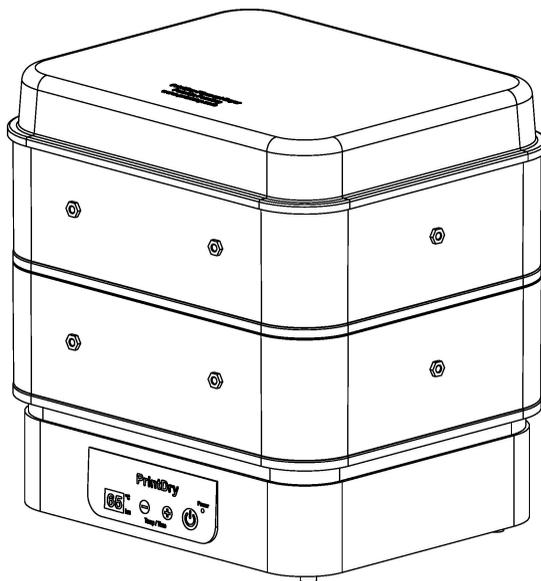

MODELS:

FD2003-100 (100VAC, 50/60Hz, 300W)

FD2003-120 (110-120VAC, 60Hz, 350W)

FD2003-220 (220-240VAC, 50Hz, 300W)

THANK YOU FOR PURCHASING THE PRINTDRY FILAMENT DRYER. BEFORE OPERATING, PLEASE MAKE SURE YOUR ELECTRICAL VOLTAGE MATCHES THE DRYER MODEL. PLEASE ALSO READ, UNDERSTAND AND FOLLOW THESE INSTRUCTIONS. BE SURE TO SAVE THIS BOOKLET FOR FUTURE REFERENCE.

Version: 2022-06

1. IMPORTANT SAFEGUARDS

When using an electrical device, basic safety precautions should always be followed, including the following:

- Read all instructions before using the PrintDry filament dryer (hereinafter referred as the "dryer").
- **DO NOT** touch hot surfaces and always use dryer on a heat resistant surface.
- To protect against electrical hazards, **DO NOT** immerse cord, plug or the dryer in water or any other liquid. **DO NOT** switch the dryer ON if surfaces are wet.
- **DO NOT** allow children under age 12 or any person with reduced physical sensory or mental capabilities to use the dryer. Close supervision is necessary when the dryer is used near children or any persons with reduced physical sensory or mental capabilities.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off any parts.
- **DO NOT** operate the dryer with a damaged cord or plug or after the dryer malfunctions, or has been damaged in any manner. Return the dryer to the manufacturer for examination, repair or adjustment. See Warranty section.
- Use of unauthorized accessories/attachments may cause hazards & injuries.
- **DO NOT** use outdoors.
- **DO NOT** let cord hang over edge of table or counter, or touch hot surfaces.
- **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
- **DO NOT** block the air intakes or exhaust in any manner.
- **DO NOT** use for other purposes other than the intended use.
- To disconnect, turn the power switch to 'OFF', then unplug from wall outlet.
- **DO NOT** pour liquids into the dryer.
- **ONLY** turn 'ON' the power after the lid is closed.
- **TURN** 'OFF' the power switch before opening the lid
- **DO NOT** leave the dryer unattended while in use at any time.
- **DO NOT** operate near combustible or pressurized spray cans.
- **DO NOT** use the dryer more than **48** continuous working hours. After a maximum of 48 hours in use, turn **OFF** and unplug the dryer for at least 1 hour.
- Leave a minimum 250 mm (12") open space all around the exterior of dryer.
- Store in a dry & clean place. Do not drop, knock or shake the dryer. Rough

handling can break the internal circuit board & diminish product performance.

- Do not open the dryer base as this may cause damage or malfunction. There is no user-serviceable part inside the dryer base.
- Following proper safety and operating instructions is the responsibility of the owner. Failure to use and maintain the dryer in accordance with the instructions outlined in this manual will void the warranty and liability of dryer manufacturer.

WARNING: MISUSE OF PRINTDRY PRODUCTS INVOLVES SERIOUS RISKS INCLUDING INJURY AND PROPERTY DAMAGE.

2. INTRODUCTION

The model FD2003 offers an easy and quick way to remove moisture from filaments for better quality of 3D printing. It works with both 1.75mm & 3mm diameter filaments of most filament material.








Model FD2003-220 has a non-polarized plug, which can be plugged into a 220VAC outlet. Model FD2003-120 has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in anyway.

Filament spools up to the max outside diameter (**OD**) of 304mm (12") can be used depending on the configurations below:

- **Dryer Standard Package:**
2 vertically mounted spools with max OD of 203mm (8") each. See Fig.1.
- **Optional Large Spool Kit + Dryer Standard Package:**
1 large vertically mounted spool with max OD of 304mm (12"). See Fig.9
- **Optional Additional Chamber Kit + Dryer Standard Package:**
4 vertically mounted spools with max OD of 203mm (8") each. See Fig.7.

The standard dryer package doesn't include these optional kits.

Dryer Parts List (Model FD2003, Code 2206)

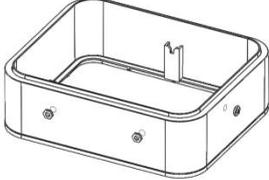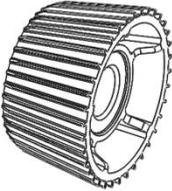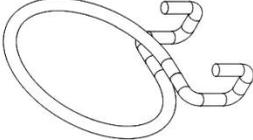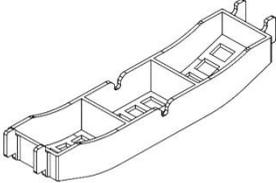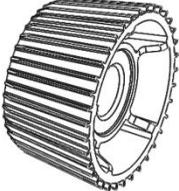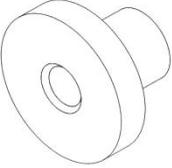 <p>Top Lid (1x)</p>	 <p>Tray (2x)</p>
 <p>Dryer Base Unit (1x)</p>	 <p>Spool Support Shaft (2x)</p>
 <p>Spool Adaptor 48-54mm (4x)</p>	 <p>Shaft Clip (4x)</p>
 <p>Center Support (1x)</p>	 <p>Spool Adaptor 54-58mm (4x)</p>
 <p>Plug (2x)</p>	 <p>PTFE Tube (2x)</p>

DESCRIPTION OF PARTS

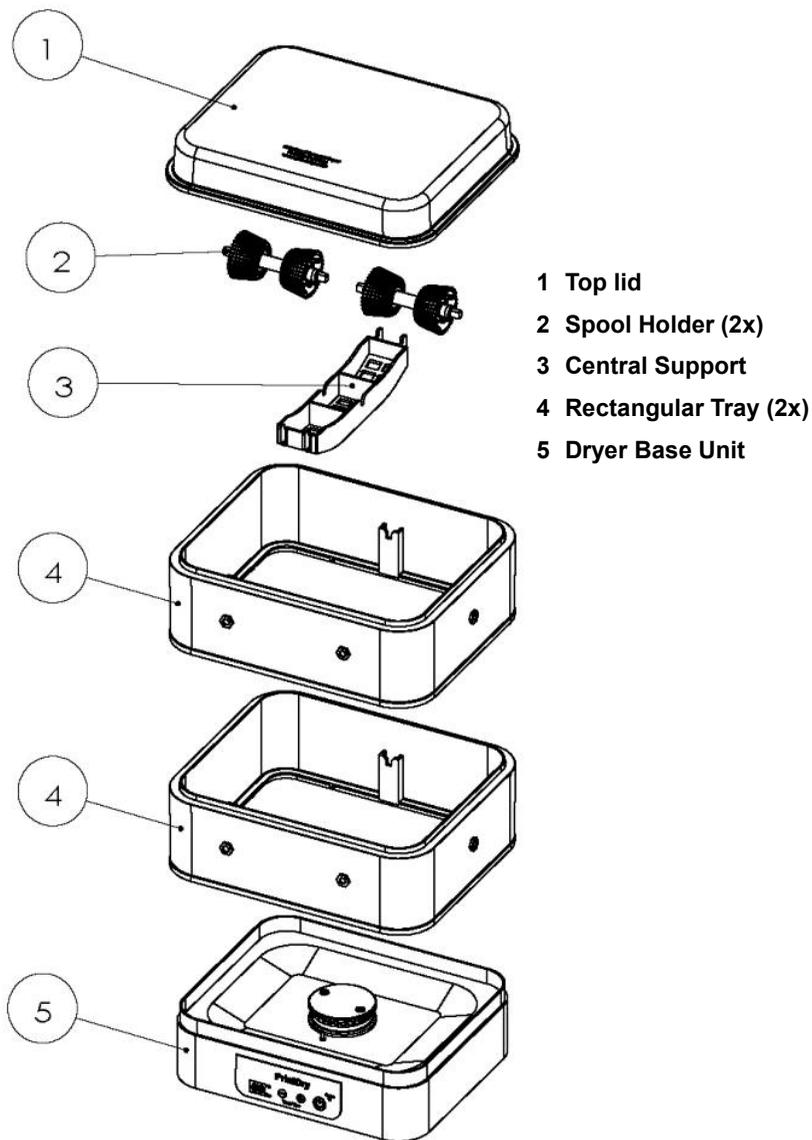


Fig.1 PrintDry Filament Dryer

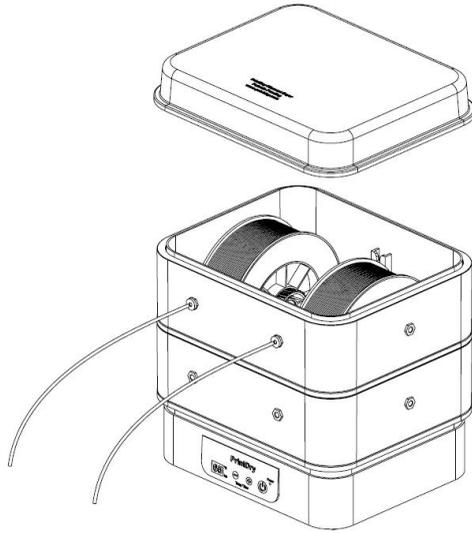


Fig.2 Dryer Standard Package for 2 Spools (max OD 203mm or 8")

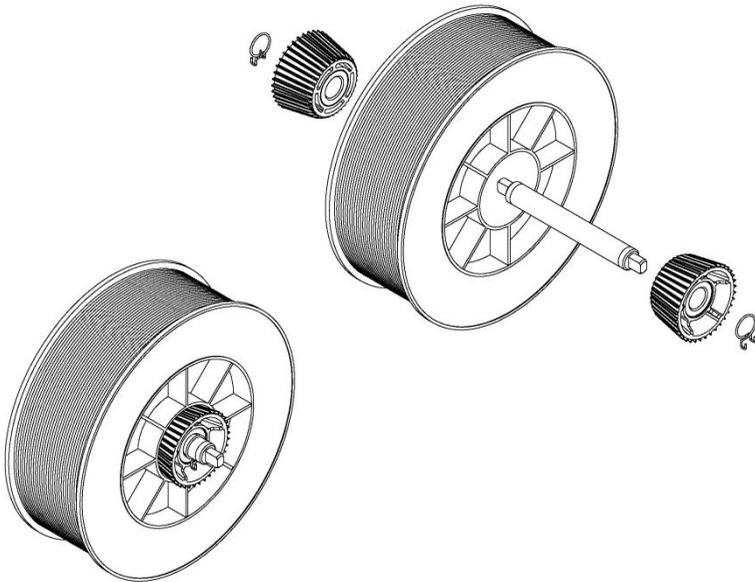


Fig.3 Assemble Filament Spool

BEFORE FIRST USE

- Unpack and remove all parts and packaging materials from the carton.
- **DO NOT** plug in the power cord before reading the instructions.
- **NEVER IMMERSE THE BASE IN WATER OR ANY OTHER LIQUID.**

3. HOW TO USE

PrintDry filament dryer offers two functions – **Dry** and **Feed+Dry**:

➤ **Dry Function**

- 1 Prepare filament spools with the mounting rods and adapters, as shown in the Fig. 3. Make sure the adapters are firmly engaged with the spool.
- 2 Put filament spools into the dryer with the mounting rod being supported on the slot of the plastic tray and the center support piece.
- 3 Place the dryer base unit on a flat, smooth heat-proof surface. Plug into wall outlet, press ON/OFF switch to turn on and select the appropriate temperature for the filament as indicated in this manual.
- 4 Press "+" and "-" buttons together to enter into the timer setup. Use "+" and "-" button respectively to set the timer (1 - 48 hours) for auto-shut-off.
- 5 When drying is completed, remove filament spools and store them in the filament container if possible with desiccants pouches (not included).
- 6 Use power switch to turn off & wait 1 minute to unplug from outlet.
- 7 Follow the instructions in the 'Care and Maintenance' section.

➤ **Feed + Dry Function**

- 1 Follow steps 1 and 2 in the previous section.
- 2 Pass the filament through the holes in plastic trays and feed into your 3D printer, it's very important to adjust the dryer's position for a smooth feeding.
- 3 Follow steps 3-6 in the previous section.

RECOMMENDED DRYING TIME

No.	Filaments	Dryer	Drying Time
		Temperature	(Hours)
1	PVA	45°C (113°F)	> 10
2	PLA	55°C (131°F)	> 3
3	ABS	65°C (149°F)	> 3
4	PETG	65°C (149°F)	> 3
5	Desiccants	65°C (149°F)	> 3
6	TPU/TPE	65°C (131°F)	> 4
7	ASA	65°C (149°F)	> 4
8	PP	65°C (131°F)	> 6
9	HIPS	75°C (149°F)	> 4
10	Nylon	85°C (185°F)	> 12
11	PC	85°C (185°F)	> 6
12	PEEK	85°C (185°F)	> 6

These recommendations are made under the following conditions.

*Ambient RH:50% *Ambient Temp:25°C *500g filament spool * Original filament

Actual filament drying time varies due to filament additives, initial water content level and ambient temperature & humidity. If a filament has been exposed in the air for weeks, it's very likely a lot of moisture has been absorbed and much longer drying time (double the regular drying time) is needed. In addition to drying the filament prior to 3D printing, drying the filament while printing is always recommended.

FILAMENT STORAGE

In order to protect the filament from absorbing moisture, always store filament spools in one of these optional filament containers with some desiccant pouches inside: (1) regular filament containers; (2) vacuum sealed filament containers; (3) smart filament containers. Please regularly re-generate desiccant pouches by using our dryer. Please visit our website for more information regarding storage containers.

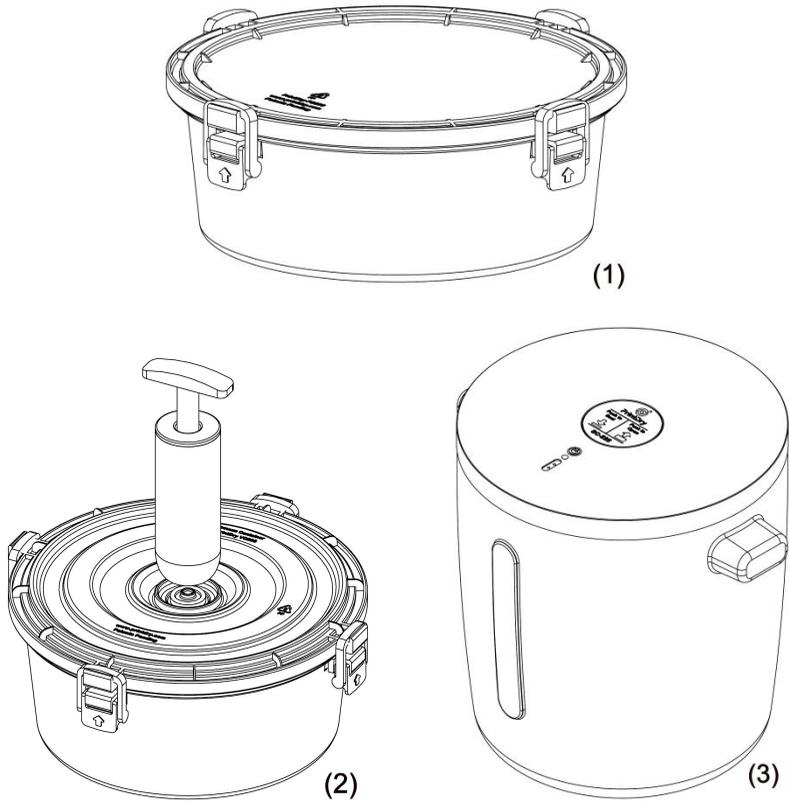


Fig.4 Optional Filament Storage: (1) regular filament container; (2) vacuum sealed filament container; (3) smart filament container.

OPTIONAL ACCESSORIES

- **D-Spool:** For more efficient drying, it is recommended to use an optional D-spool (available on www.printdry.com), as shown below.

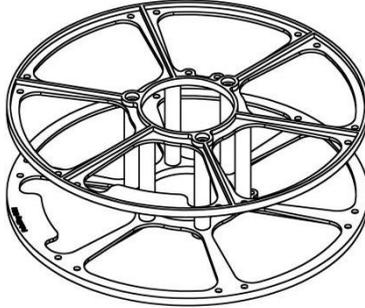


Fig.5 Optional D-spool

- **ACK:** Additional chamber kit (Fig. 6) can be added on top to hold 2 additional filament spools, as shown in Fig. 7. Please visit our website for more info.

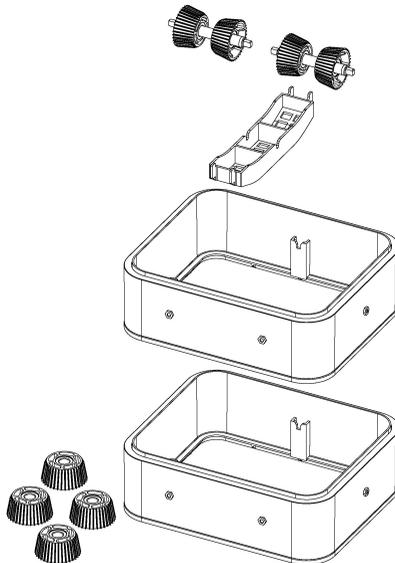


Fig.6 Additional Chamber Kit (Optional)

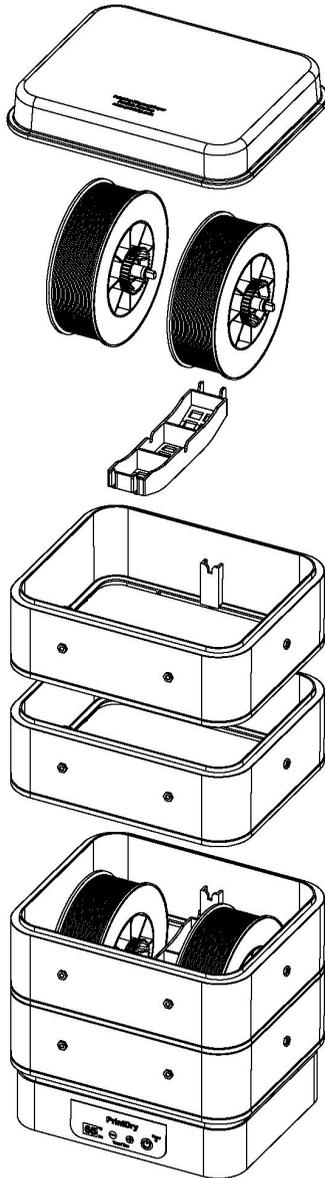


Fig.7 Use of Additional Chamber Kit (ACK-PRO)

- A large spool kit (Fig. 8) is necessary in order to mount a large filament spool with the max. OD of 304mm (12") into a standard dryer, as show in Fig.9. Please visit our website for more information.

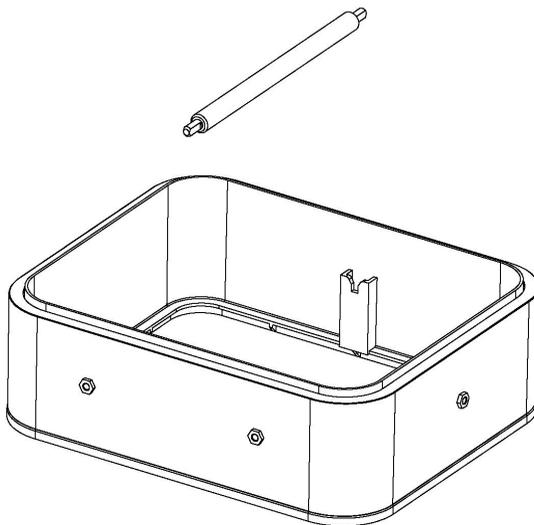


Fig.8 Optional Large Spool Kit (LSK-PRO)

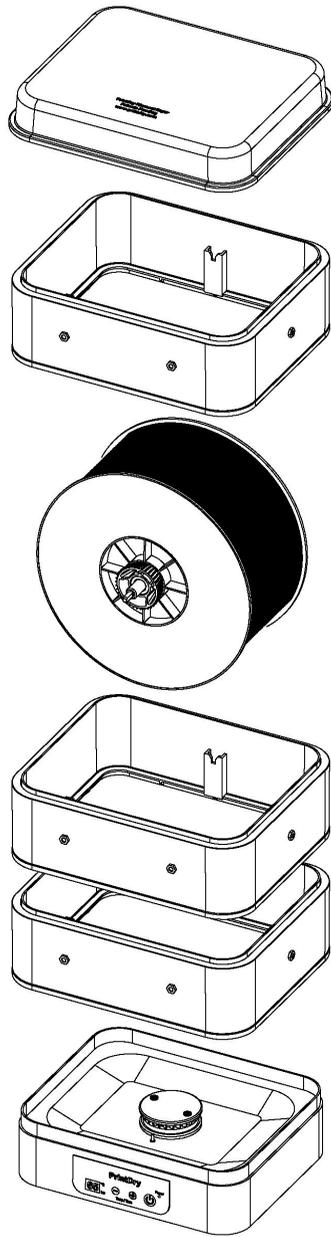


Fig.9 Use of Large Spool Kit (Optional)

CARE AND MAINTENANCE

- Turn off the dryer.
- Unplug from the wall outlet.
- If needed, wipe the base with a soft, slightly damp cloth or sponge.
- DO NOT allow water or any other liquid to get into the dryer base.
- Make sure the trays and lid are completely dry before replacing them on the base and storing.
- Any other servicing should be performed by an authorized service representative.

4. SPECIFICATIONS

Models	FD2003-100, FD2003-120, FD2003-220	
Power Supply	100VAC, 50/60Hz, 300W (Model FD2003-100) 110-120VAC, 60Hz, 350W (Model FD2003-120) 220-240VAC, 50Hz, 300W (Model FD2003-220)	
Dryer Temperature*	35-85°C with 10°C increment	(95-185°F)
Weight	4.5 Kg	(8.5 lbs)
Dryer Dimensions	32(W) x 26(L) x 35(H) cm	(13x11x16")
Max. Drying Time	48 Hours (Continuously)	
Spool Dimensions	Outside Diameter 100-304mm	(4-12")
	Height 25-150mm	(1-6")
	Mount Hole Diameter 19-58mm	(3/4 - 2.3")
	Max. Weight 5Kg	(8.8 lbs)

* The temperature distribution inside a dryer is not uniform and varies due to the following factors: (1) ambient temperature; (2) location inside a dryer; (3) how many filament spools and desiccant pouches are in the dryer. Higher ambient temperature means higher temperature inside a dryer. The temperature is higher when getting closer to the hot air outlet or when drying multiple filament spools and a lot of desiccant pouches.

5. WARRANTY

PrintDry filament dryer is warranted to be free from defect in material and workmanship for a period of ONE year under normal use after its original purchase date. This warranty extends only to the original retail purchaser. If the device should become defective within the warranty period, please contact us for repair or replacement. We reserve the right to replace a defective product with the most comparable product currently available. The entire liability for any defective product shall in no event exceed the purchase price for the defective product. The product liability & warranty **DOES NOT** cover products damaged by the following:

- Misuse, accident, abuse or alteration
- Serviced by unauthorized persons
- Use with unauthorized accessories
- Damage incurred during shipping
- Connecting to incorrect current and voltage
- Any other conditions beyond our control

TO THE EXTENT PERMITTED BY LAW, PRINTDRY SHALL NOT BE RESPONSIBLE FOR ANY DIRECT OR INDIRECT DAMAGES RESULTING FROM THE USE OR MISUSE OF THE DEVICE INCLUDING ANY GENERAL, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES. ALL IMPLIED REPRESENTATIONS, WARRANTIES OR CONDITIONS INCLUDING BUT NOT LIMITED TO ANY IMPLIED REPRESENTATIONS, WARRANTIES OR CONDITIONS OF FITNESS AND MERCHANTABILITY ARE LIMITED IN DURATION TO ONE YEAR FROM THE DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights, and you may also have other rights that vary depending on your state, province or other jurisdiction. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations and exclusions may not apply to you. This warranty does not include the cost of returning shipping.

6. CUSTOMER SUPPORT

The PrintDry filament dryers (Model FD2003-100, FD2003-120, FD2003-220) have been respectively certified or in the process of being certified by:



For product updates and more information about PrintDry filament dryers, please contact us at:

www.printdry.com **info@printdry.com**